




Bottomless Tokens™ 2018

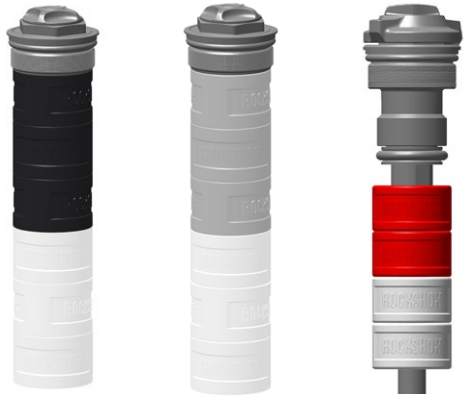

Factory installed
 Zamontowane fabrycznie

Available
 Dostępne

Monteret fra fabrikken
 Namontováno výrobcem

Overskydende
 K dispozici

Εργοστασιακή τοποθέτηση
 Montate din fabrică

Διαθέσιμο
 Disponibile

32 mm Solo Air™
 35 mm Solo Air / DebonAir™
 35 mm Dual Position Air™
 Available
B Boost
DPA Dual Position Air

Bluto™			
	80 mm	100 mm	120 mm
26"	 4 Max	 4 Max	 4 Max

BOXXER®	
	200 mm
26" 27.5"	 4 Max

Lyrrik DebonAir									
	150 mm	160 mm	170 mm	180 mm		150 mm	160 mm	170 mm	180 mm
27.5"B	 5 Max	 5 Max	 4 Max	 4 Max	29"B	 5 Max	 5 Max	 4 Max	 4 Max

Lyrrik™ DPA								
	150 mm	160 mm	170 mm	180 mm		160 mm	170 mm	180 mm
27.5"B	 6 Max	 5 Max	 5 Max	 4 Max	29"B	 5 Max	 5 Max	 4 Max

PIKE® DebonAir									
	120 mm	130 mm	140 mm	150 mm	160 mm		120 mm	130 mm	140 mm
27.5"B	 6 Max	 5 Max	 5 Max	 4 Max	 4 Max	29"B	 6 Max	 5 Max	 5 Max

PIKE DJ™			
	100 mm	110 mm	140 mm
26"	 2 Max	 2 Max	 4 Max

PIKE DPA				
	150 mm	160 mm		140 mm
27.5"B	 4 Max	 4 Max	29"B	 5 Max

REBA®

	100 mm	120 mm	130 mm	140 mm	150 mm		80 mm	100 mm	120 mm	130 mm	140 mm	150 mm
27.5" 27.5"B						29" 29"B						
	3 Max	3 Max	3 Max	3 Max	3 Max		3 Max	3 Max	3 Max	3 Max	3 Max	3 Max

Revelation

	120 mm	130 mm	140 mm	150 mm	160 mm		120 mm	130 mm	140 mm
27.5"B						29"B			
	6 Max	5 Max	5 Max	4 Max	4 Max		6 Max	5 Max	5 Max

RS-1™

	80 mm	90 mm	100 mm	110 mm	120 mm
26" 27.5" 29"					
	3 Max	3 Max	3 Max	3 Max	3 Max

SID®

	80 mm	100 mm
27.5" 27.5"B 29" 29"B		
	3 Max	3 Max

Yari DPA

	150 mm	160 mm	170 mm	180 mm
27.5"B 29"B				
	6 Max	5 Max	5 Max	4 Max

Yari™ DebonAir™

	150 mm	160 mm	170 mm	180 mm		150 mm	160 mm	170 mm	180 mm
27.5"B					29"B				
	5 Max	5 Max	4 Max	4 Max		5 Max	5 Max	4 Max	4 Max

For Bottomless Token™ installation instructions, find your fork's service manual at www.sram.com/service.

For Bottomless Token installation instructions, find your fork's service manual at www.sram.com/service.

For Bottomless Token installation instructions, find your fork's service manual at www.sram.com/service.

For Bottomless Token installation instructions, find your fork's service manual at www.sram.com/service.

For Bottomless Token installation instructions, find your fork's service manual at www.sram.com/service.

For Bottomless Token installation instructions, find your fork's service manual at www.sram.com/service.

For Bottomless Token installation instructions, find your fork's service manual at www.sram.com/service.

For Bottomless Token installation instructions, find your fork's service manual at www.sram.com/service.

For Bottomless Token installation instructions, find your fork's service manual at www.sram.com/service.